

# Quick Start Guide for the RT10

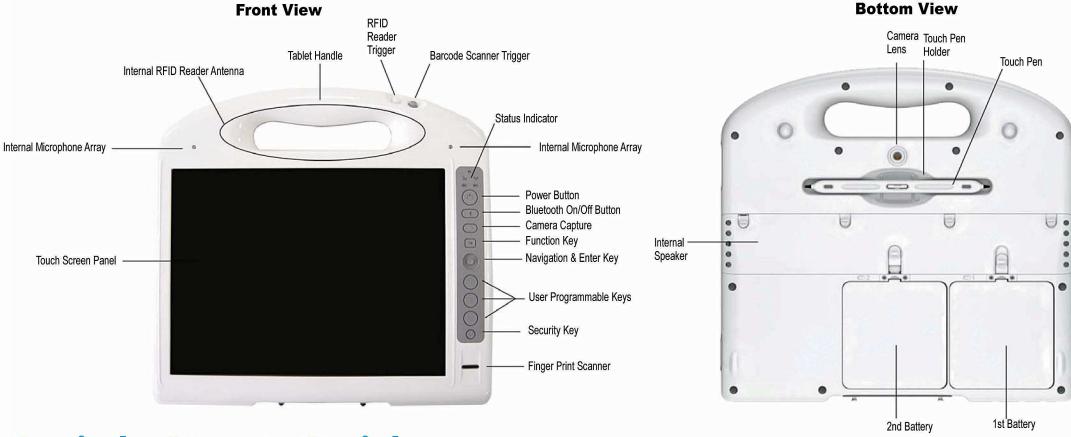

#### Right View

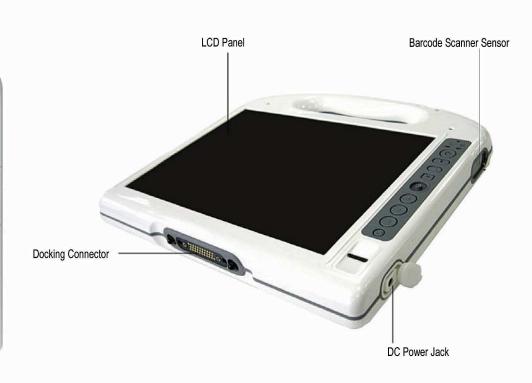



## Quick Start Guide for the Docking Station Connectors

**Front View** 



Right View

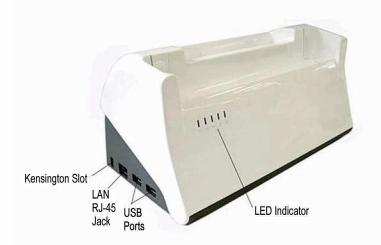

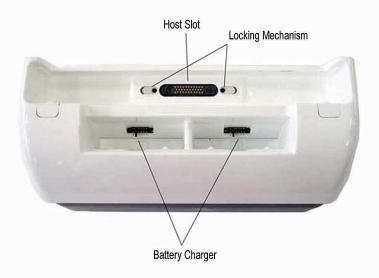



#### **Details**

**Kensington Slot**: Kensington Slot is part of an anti-theft system used as a deterrent to prevent opportunist theft. It is used for attaching a lock-and-cable apparatus.

#### **LED Indicator**



Power	Green when system is active  Green when battery is fully charged Orange when battery is charging	
Battery 1 & 2		
LAN	Green when the LAN is connected	
Lock	Green when the locking mechanism is on	



10511 Battleview Parkway Manassas, VA 20109 703-393-1940 Toll Free (US) 888-213-4900 www.EarthWalk.com ewsupport@earthwalk.com

## Quick Start Guide for the RT10 (Buttons)

#### **Buttons**

The eleven hot keys are unique features of your MCA. The function as follows:

Icon	Function		
	Suspend/Power on-off button The Power button turns system on and goes into standby automatically. If the unit has been sitting unused for a while. Press momentarily to turn on the system or to exit from standby. Press and hold for at least 3-4 seconds to turn off the system. These settings can be changed.		
0	RFID reader trigger Through setting in Intel MCA SDK (White button on handle).		
	Barcode scanner trigger (grey) Through setting in Intel MCA SDK (Grey button on handle).		
*	Bluetooth On/Off button Press to wakeup built-in Bluetooth module, Bluetooth module will be power down after certain time set by user if no more activities.		
	Camera Capture Through setting in Intel MCA SDK		
Fn	Function Button Alternative definition for navigation, user programmable and security button.		
0	Navigation & Enter Key 5 ways button for Up/Down/Left/Right/Enter.		
	Security key Similar function as pressing Ctrl+Alt+Delete on a standard keyboard.		
	3 user programmable keys Press to launch specific program defined by user through Intel MCA SDK (software development kit)		

#### **Power Indicators**

The power indicators show which power source the system is using. They also show battery status and low battery power alerts. The power indicators remain active and viewable even when the LCD panel is closed.

Icon	Light	Description
(( <del>_</del> ))	Blue	Wireless LAN is in use
Ů	Green	RFID is in use
	Green	Battery fully charged
	Orange	Battery charging
	Red	When battery capacity is low than 10%
	Flashing	When OTP (over
	Orange	temperature protection) of the battery is
		activated
Û	Green	Power is on and the battery is in use
	Flashing Green	Power is in suspend mode



To Release RT10 from Docking Station:

\*\*Be sure that the Power and Lock LED Indicators are lit. Press the FN button once, and then the Navigation & Enter Key once. Wait for a one click sound and pull the RT10 out of Docking Station\*\*

### **Function Keys**

Press the Fn key first and then press the function key.

Description	
Volume down	
Volume up	
+ Left Brightness decrease	
Brightness increase	
Enable/ disable the 3G module	
To lock/unlock the touchscreen manually	
To unlock the docking station manually	

\*User may also choose to lock the touchscreen automatically after some idle time. See page 23 for detailed setting.



10511 Battleview Parkway Manassas, VA 20109 703-393-1940 Toll Free (US) 888-213-4900 www.EarthWalk.comewsupport@earthwalk.com