


# Quick Start Guide for SmartCart32 [32-bay] Configurations

# Let's Get Started

## 32-bay SmartCart with PowerStation

## 32-bay SmartCart w/ BatteryBay Charging System

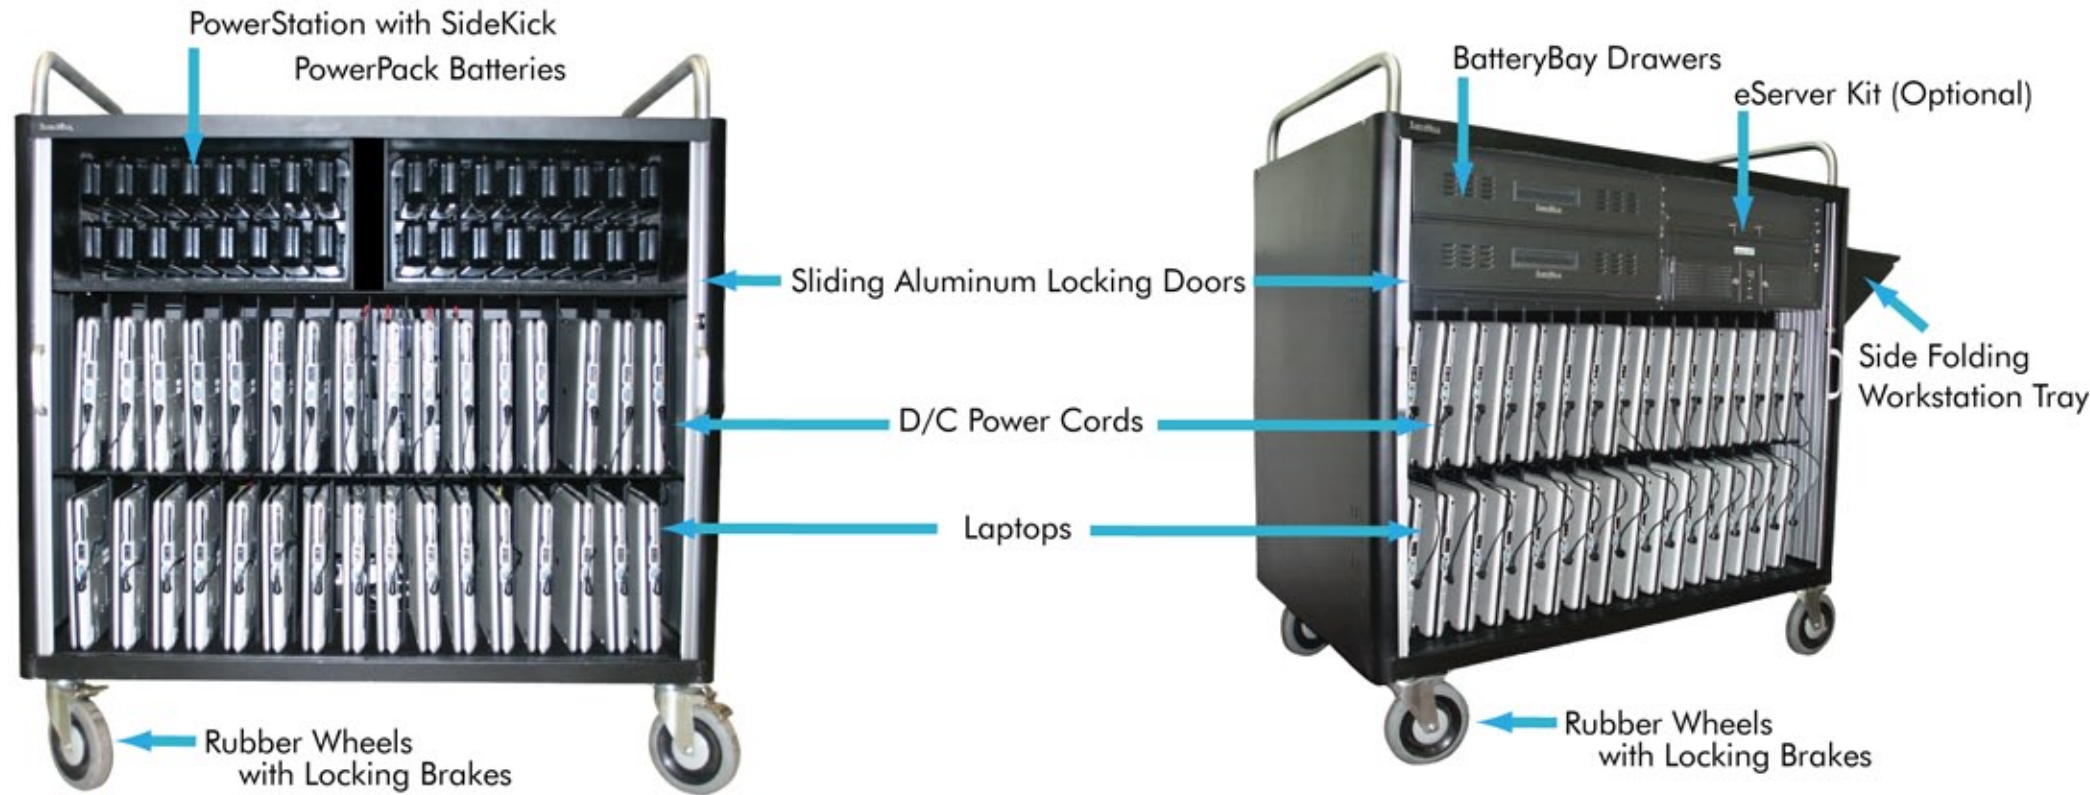


- Make sure the power switch located on the back panel of the SmartCart is in the OFF position. Insert the power cord into an electrical outlet. Connect your network cable into the SmartCart Ethernet Uplink.
- Remove bubble wrap from Access Point antennas and place upright on top of the SmartCart. Reconfiguring the Access Points is not necessary unless your school has a dedicated wireless infrastructure. Refer to the SmartCart User Manual in PDF format.
- Carefully insert the laptops into each slot and plug in the power cord for each laptop. Batteries should be installed in the laptop prior to recharging. SideKick or laptop batteries should be placed into the Power Station/BatteryBay Drawer for charging prior to use.
- Turn on the SmartCart, the instructor's laptop (or desktop PC) and any peripherals to check that all are recognized and computer content can be displayed.

### OPTIONAL STEPS (if applicable):

- Connect the VGA port from the instructor's laptop (or desktop PC) to the PC/TV monitor\* or Digital projector\* using the VGA cable provided with the display device. Connection locations vary.
- Locate the audio output on the instructor's laptop (or desktop PC) and connect to the appropriate PC audio inputs located on the PC/TV monitor\* or Digital projector\*.
- To install a wireless keyboard\*, connect the Infrared Detector's USB cable to any one of the open USB ports located on the instructor's eBuddy (or desktop PC). Attach the Infrared Detector on top of the PC/TV monitor or where you will have a clear line of sight when using the remote wireless keyboard. Please refer to the NetWize User Manual for further instructions regarding driver installation.

## SMARTCART REAR VIEW

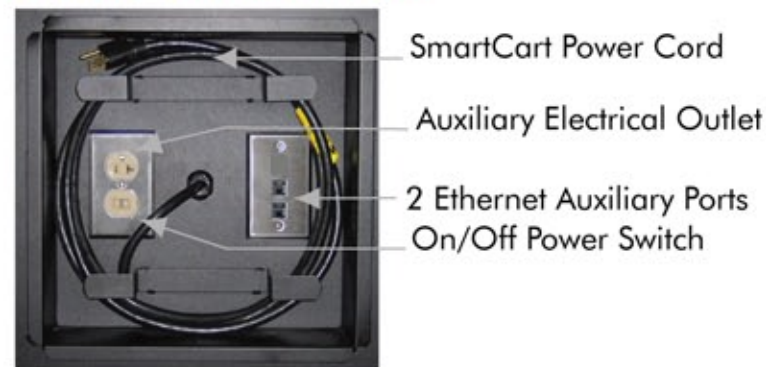

## SideKick Batteries

- Insert the SideKick PowerPack into the PowerStation eCharger and within 5 minutes a "Blinking Green" LED will indicate the eCharger is "On" and that the SideKick is charging.
  - When the SideKick LED turns a "SOLID GREEN," this indicates that it is now fully charged. NOTE: For optimal performance and extended battery life, charge overnight. Batteries are fully charged after 12-14 hours.
  - When fully charged, plug the SideKick into your laptop as you would your power adapter.
- A "SOLID GREEN" LED (with no blinking) indicates that your SideKick has full to half power capacity.
  - A "Blinking GREEN" LED that STEADILY blinks on and off at 1-second intervals indicates your SideKick is a half to low power capacity.
  - A "Blinking GREEN" LED that RAPIDLY blinks on and off at 1/2-second intervals indicates that your SideKick is at low or nearly depleted power capacity. Save your work, power down your laptop, and place the SideKick back in the PowerStation for re-charging.



10511 Battleview Parkway Manassas, VA 20109  
703-393-1940 Toll Free 888-213-4900  
www.EarthWalk.com ewsupport@earthwalk.com

