


# Quick Start Guide for MiniMax Configurations

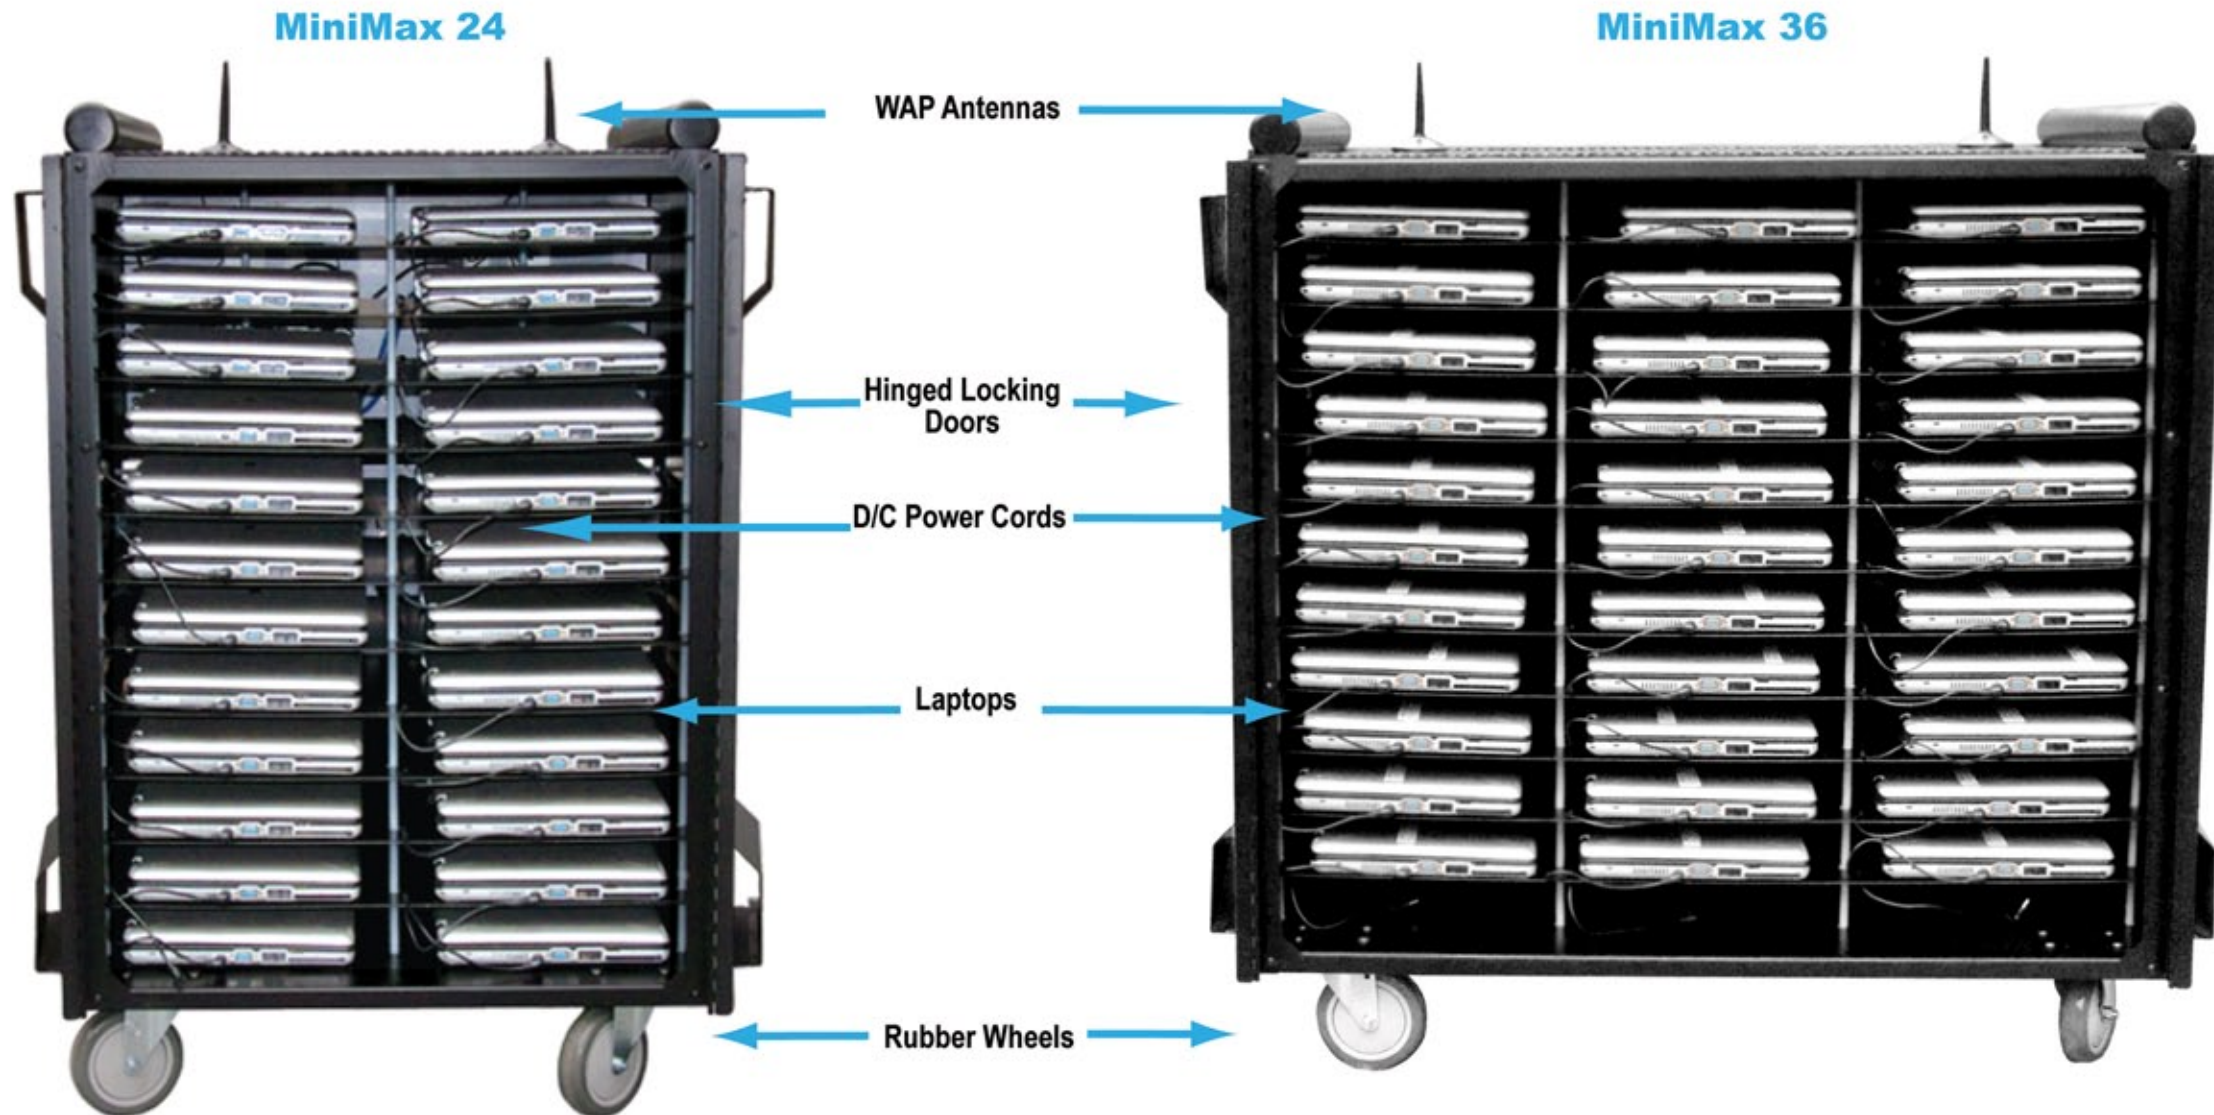

## Let's Get Started:

- Make sure the power switch located on the back panel of the MiniMax is in the OFF position. Insert the power cord into an electrical outlet. Connect your network cable into the MiniMax Ethernet Uplink port.
- Remove bubble wrap from Access Point antennas and place upright on top of the MiniMax. Reconfiguring the Access Point is not necessary unless your facility has a dedicated, wireless infrastructure. Refer to the WAP configuration instructions located on the Technical Support section of our website.
- Turn on the MiniMax, the instructor's laptop (or desktop PC) and any peripherals to check that all are recognized and computer content can be displayed.

### MiniMax—REAR VIEW

